


Recommended Gowning Room Design

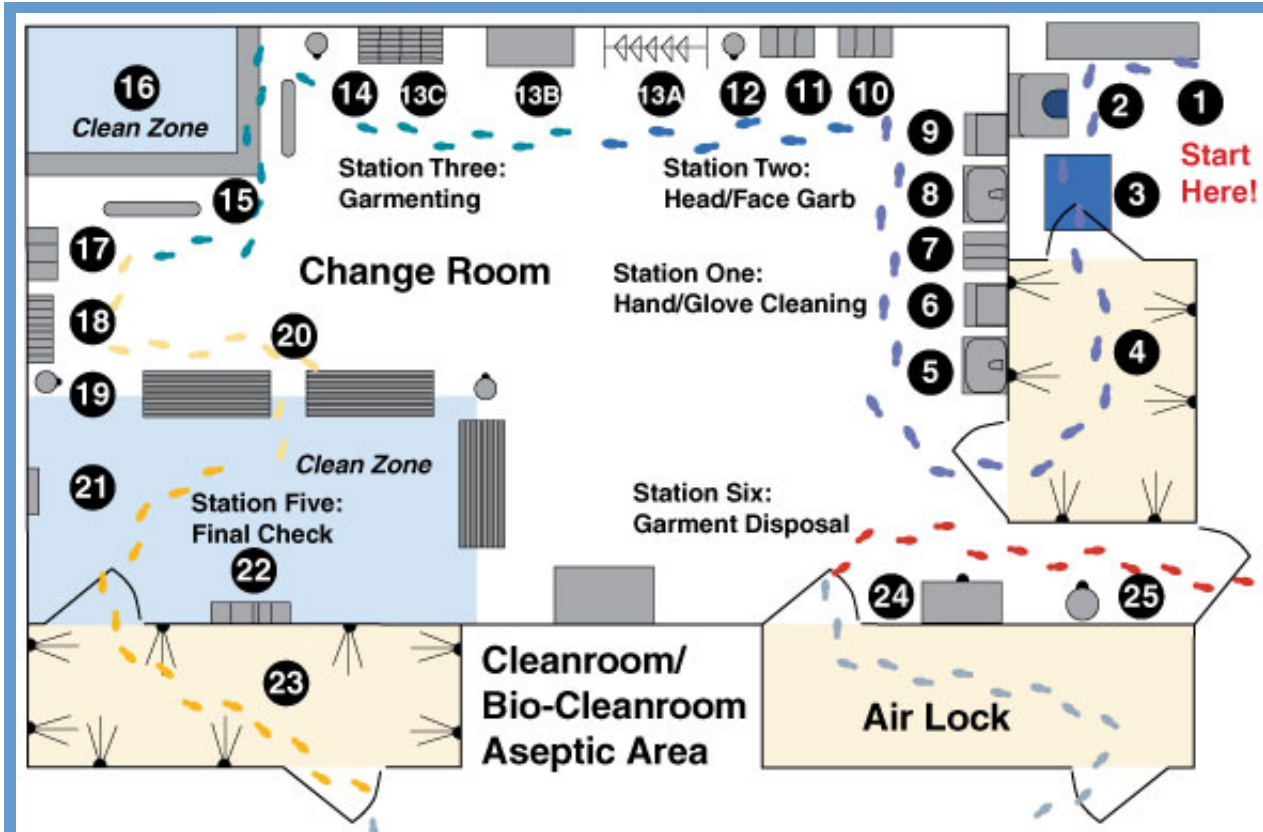

Change Room Key

1. Secure lockers for clothing and personal property
2. Shoe cleaner, with rotating brushes to remove gross contaminants
3. Walk-off adhesive shoe mat
4. Air Shower, with HEPA filtered air jets to remove loose contaminants
5. Hand washing station, no-touch operation
6. Hand dryer (if not incorporated into washer), HEPA/ULPA-filtered air, no touch
7. Dispenser for glove liner or underglove
- 8/9. Glove washing/drying station (if gloves not clean)
10. Headwear dispenser
11. Face mask dispenser
12. Waste receptacle—should be installed wherever packaging is removed
13. Garment Storage Facility—depends on garment type
 - 13a Open Garment Rack for reusable garments
 - 13b Enclosed Garment Cabinet for reusable garments (includes HEPA blower)
 - 13c Garment Storage Shelves for packaged disposable garments
14. Waste Receptacle
15. Ergonomic Lean Rails support personnel while donning coveralls

16. Gowning Platform provides a noncontaminated surface to prevent violation of garment
17. Wiper dispenser—used to clean bench prior to putting on booties
18. Bootie/shoe cover dispenser (may also be incorporated into benches)
19. Waste Receptacle
20. Gowning benches, used when putting on booties. Booties stay on "clean" side
21. Cleanroom mirror for final self-inspection (side-by-side w/poster showing correctly garbed model)
22. Safety glass and overglove dispensers
23. Air shower—may be required in cleanroom entrance
24. Garment hamper for reusable garments to be laundered
25. Waste receptacle for disposable garments
26. Tools, supplies cabinet for overstock garments or cleanroom supplies

© 1999 – 2015 Terra Universal. Inc. All rights reserved