


ASSEMBLY & OPERATING INSTRUCTIONS

ULTRA-CLEAN MOTORIZED SHOE CLEANER

MODEL # 1600-VA/1600-SA

- INSERT HANDLE INTO MATING SOCKETS IN SHOE BRUSHER. FOR PROPER INSTALLATION, THE HANDLE SHOULD BE INSERTED THE FULL DEPTH OF THE STUBS

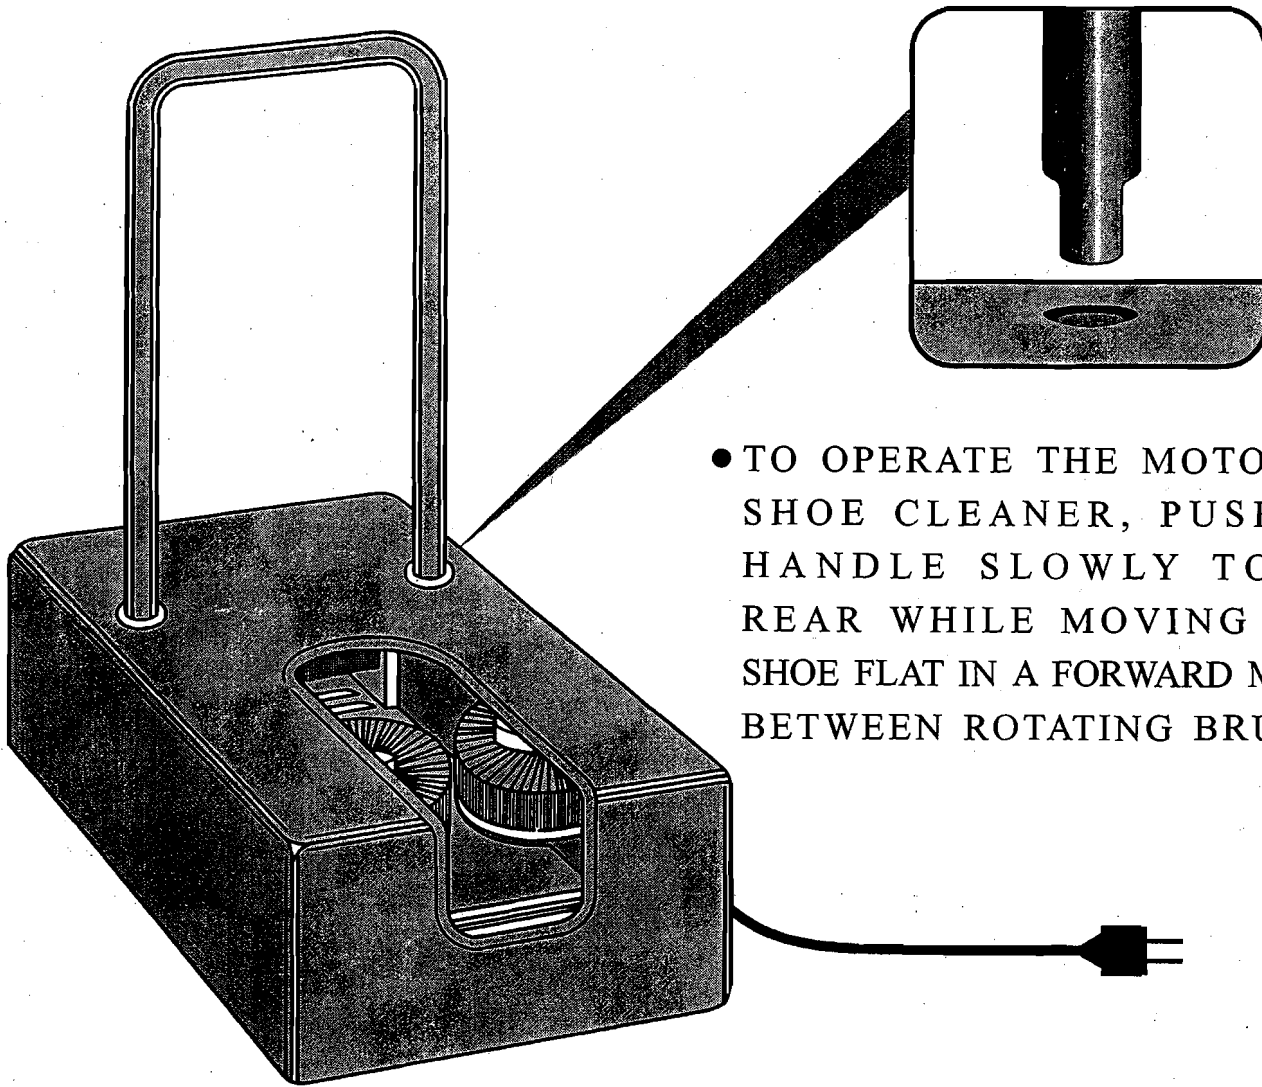

- TO OPERATE THE MOTORIZED SHOE CLEANER, PUSH THE HANDLE SLOWLY TO THE REAR WHILE MOVING YOUR SHOE FLAT IN A FORWARD MOTION BETWEEN ROTATING BRUSHES.

- NO INTERNAL CONNECTIONS OR ADJUSTMENTS SHOULD BE REQUIRED

UCP

ULTRA-CLEAN PRODUCTS, L.L.C.

17882 SAMPSON LANE, HUNTINGTON BEACH, CA 926247

PHONE 714 596-3394 FAX 714 843-6123

E-MAIL ULTRACLEANPRODUCTS@AOL.COM