



### Product Materials

**MIRROR:** First quality 1/4" float glass, thermosetting infrared-cured paint backing. Manufactured in accordance with ASTM C 1036 and ASTM C 1503. Edges ground and polished smooth.

### Installation

Verify all rough-in dimensions prior to installation.

**MODEL 747:** Secure mounting clips (metal) to wall with screws included, then engage mirror into clips.

### Guide Specification

Frameless mirror shall be of first quality 1/4" float glass, guaranteed for 15 years against silver spoilage. Edges ground and polished smooth.

**Frameless Mirror shall be Bradley Model 747-\_\_\_\_\_ " W x \_\_\_\_\_ " H (specify width and height).**

Model 747 series frameless mirrors can be fabricated to a maximum size of 60"W x 96"H.

Tolerance: +0" / -1/8"



### ADA Compliant

- Consult local and national accessibility codes for proper installation guidelines.
- Conformity and compliance to local and national codes is the responsibility of the installer.


### Models (Must select one)

<b>Model 747-018360</b>	18" x 36" Mirror
<b>Model 747-018420</b>	18" x 42" Mirror
<b>Model 747-024360</b>	24" x 36" Mirror <b>BradEX®</b>
<b>Model 747-024420</b>	24" x 42" Mirror
<b>Model 747-024480</b>	24" x 48" Mirror
<b>Model 747-030360</b>	30" x 36" Mirror <b>BradEX®</b>
<b>Model 747-030420</b>	30" x 42" Mirror
<b>Model 747-036360</b>	36" x 36" Mirror
<b>Model 747-036420</b>	36" x 42" Mirror
<b>Model 747-036480</b>	36" x 48" Mirror
<b>Model 747-036540</b>	36" x 54" Mirror
<b>Model 747-036600</b>	36" x 60" Mirror
<b>Model 747-036720</b>	36" x 72" Mirror
<b>Model 747-042420</b>	42" x 42" Mirror
<b>Model 747-048480</b>	48" x 48" Mirror
<b>Model 747-XXXX</b>	_____ "W x _____ "H

Orders composed of products indicated as **BradEX®** will be available to ship in three days after receipt of order at the factory. There is no pricing penalty for this service from Bradley.



**Dimensions**

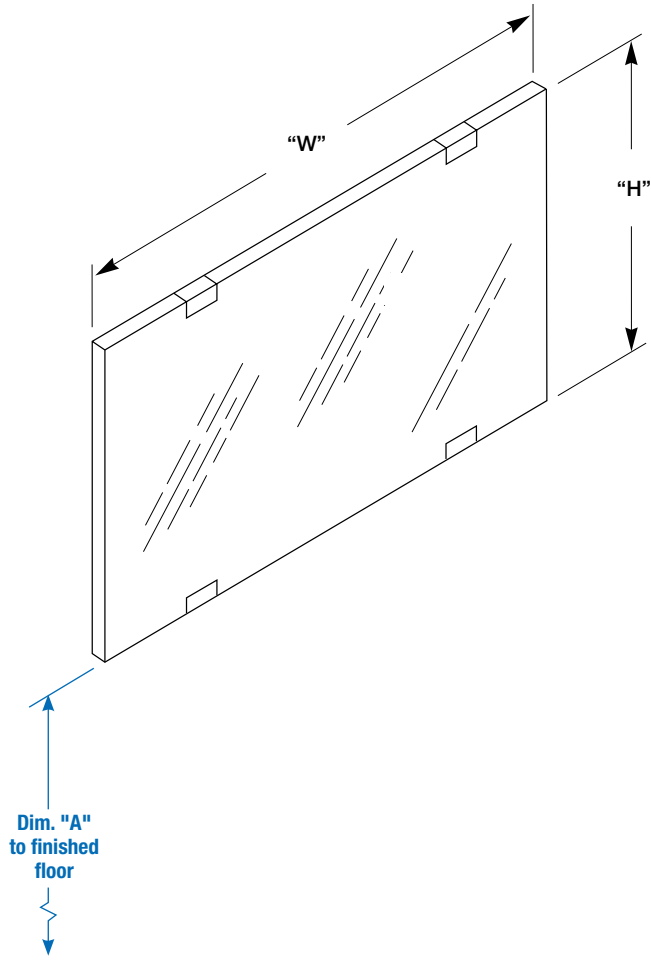

<b>Dim. "A" Key Surface:</b>	<b>For Dim. "A"</b>	<b>Bottom of Unit*</b>
<b>Mirror's bottom edge of the reflecting surface to finished floor</b>	40" (1016mm)	Same as Dim "A"
	37" (940mm)	Same as Dim "A"
	34" (864mm)	Same as Dim "A"
<b>Rough wall opening:</b>		
Surface Mount:	No rough wall opening, see overall dimensions	

\*The mirror is frameless which means the bottom of unit equals the reflective surface.

Orders composed of products indicated as **BradEX**® will be available to ship in three days after receipt of order at the factory. There is no pricing penalty for this service from Bradley.