



Item # _____

Job _____

METROMAX Q™ SHELVING

with *Microban Antimicrobial Product Protection

Part of the innovative MetroMax iQ™ Storage System, MetroMax Q™ is a longer life storage solution than conventional wire shelving. The product offers durable polymer mats that remove for easy cleaning and protect stored items from damage. Quick adjust shelves and MetroMax iQ accessories provides a very efficient use of storage space. MetroMax Q™ is integrated with online space planning tools and tutorials. www.metro.com/iQ

- Longer-life performance:** Durable, corrosion proof polymer mats protect the shelves from normal wear and tear. Robust epoxy coated steel frames and posts hold as much weight as Metro's wire shelving. Weight capacity for evenly distributed loads:
 800 lbs. (363kg) per shelf for lengths of 24" to 48" (610 to 1220mm)
 600 lbs. (275kg) per shelf for lengths of 54" (1370mm) or longer
 2,000 lbs. (907kg) maximum per stationary unit.
- Interchangeable:** MetroMax Q and MetroMax i™ shelves, posts, and most accessories are compatible on the same unit. Use MetroMax Q shelves with MetroMax i™ polymer posts for increased corrosion protection. Use MetroMax i™ solid shelves when spill containment is required or as a bottom shelf to protect supplies from dirt or backsplashes from mops.
- Easier to clean and maintain:** Polymer mats can be easily removed and cleaned in a sink or dish machine. Microban antimicrobial product protection is built into the high contact areas of the shelf including the mats, frames, and posts to protect the product from bacteria, mold, mildew, and fungus that cause odors and product degradation. Microban protection keeps the product "cleaner between cleanings".
- Quick to Adjust:** Patented corner release allows shelves to be unlocked without tools. Simply flip each corner release, relocate the wedge connectors on the posts, and reposition the shelf. Quickly adjust shelves to reclaim wasted vertical space.
- Smooth, Protective Surfaces:** Smooth shelf mats protect packaged items from unwanted rips, tears, or damage.
- Open Grid and Solid Mat Options:** MetroMax Q is available with open grid mats as standard. Open grid shelves promote air circulation and light penetration.
 MetroMax i™ solid shelves can be used with MetroMax Q grid shelves on the same unit and are available in 18" and 24" (457 and 610mm) depths. For 21" (530mm) deep MetroMax Q, solid mat overlays are available.
- Efficient, Organized Storage:** Premium MetroMax iQ™ accessories efficiently organize, contain, and compartmentalize **all** space between shelves.
- Quick to Assemble:** MetroMax Q assembles easily in minutes, without tools. Shelves can be adjusted at 1" (25mm) increments along the post. Shelf wedges have a window to locate your desired position.



MetroMax Q Mobile Unit



MetroMax Q with Accessories and MetroMax i Solid Bottom Shelf

*MICROBAN® and the MICROBAN® symbol are registered trademarks of the Microban Products Company, Huntersville, NC.



InterMetro Industries Corporation
North Washington Street
Wilkes-Barre, PA 18705
www.metro.com



MetroMax Q™ Polymer and Steel Shelving

9.21



Specifications

- **Shelf frames and posts:** Steel with electroplated substrate and highly durable, abrasion-resistant epoxy finish. Epoxy finish has built-in Microban antimicrobial product protection. The adjustable foot is reinforced nylon.
- **Shelf Mats:** Injection molded polypropylene with exclusive built-in Microban® antimicrobial product protection.
- **Shelf Wedge Connector:** Reinforced nylon.
- **Temperature range:** -20°F (-29°C) to 125°F (52°C) continuous use, with intermittent exposure to 200°F (93°C) for cleaning.


Standard Interchangeable Shelves

- Part number includes shelf with removable mats and one bag of wedges.
- MetroMax Q grid shelves, MetroMax i™ grid and solid shelves are all compatible on the same unit.

Nominal Width (in.) (mm)	Nominal Length (in.) (mm)	MetroMax Q Shelf with Grid Mat Model No.	Approx. Pkd. Wt. (lbs.) (kg)	MetroMax i™ Shelf with Solid Mat Model No.	Approx. Pkd. Wt. (lbs.) (kg)
18 457	24 610	MQ1824G	6.2 2.8	MX1824F	12.7 5.8
18 457	30 760	MQ1830G	8.0 3.6	MX1830F	14.5 6.6
18 457	36 914	MQ1836G	9.7 4.4	MX1836F	17.2 7.8
18 457	42 1060	MQ1842G	11.4 5.2	MX1842F	20.1 9.1
18 457	48 1220	MQ1848G	13.2 6.0	MX1848F	23.1 10.5
18 457	54 1372	MQ1854G	15.0 6.8	MX1854F	21.5 9.7
18 457	60 1524	MQ1860G	16.7 7.6	MX1860F	23.2 10.5
18 457	72 1829	MQ1872G	20.0 9.1	MX1872F	27.5 12.5
21 530	24 610	MQ2124G	8.0 3.6	—	—
21 530	30 760	MQ2130G	9.7 4.4	—	—
21 530	36 914	MQ2136G	11.4 5.2	—	—
21 530	42 1060	MQ2142G	12.8 5.8	—	—
21 530	48 1220	MQ2148G	14.5 6.6	—	—
21 530	54 1372	MQ2154G	16.7 7.6	—	—
21 530	60 1524	MQ2160G	18.5 8.4	—	—
21 530	72 1829	MQ2172G	21.7 9.9	—	—
24 610	24 610	MQ2424G	9.7 4.4	MX2424F	14.2 6.4
24 610	30 760	MQ2430G	11.4 5.2	MX2430F	15.9 7.2
24 610	36 914	MQ2436G	13.1 6.0	MX2436F	19.6 8.9
24 610	42 1060	MQ2442G	14.1 6.4	MX2442F	21.5 9.8
24 610	48 1220	MQ2448G	15.8 7.1	MX2448F	25.3 11.5
24 610	54 1372	MQ2454G	18.5 8.4	MX2454F	25.0 11.3
24 610	60 1524	MQ2460G	20.3 9.2	MX2460F	26.8 12.1
24 610	72 1829	MQ2472G	23.5 10.7	MX2472F	31.0 14.1

Actual Dimensions:

Width: Add 3/16" (10mm) to nominal size.
Length: Subtract 3/16" (5mm) from nominal size.

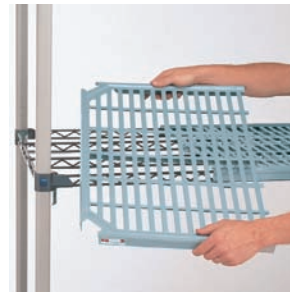

MetroMax Q Open Grid Shelf



MetroMax i™ Solid Shelf

Heavy-Duty Dunnage Shelves

- Corrosion proof MetroMax i™ dunnage shelf is compatible with MetroMax Q.
- Open grid and solid version available.
- Weight capacity per shelf evenly distributed: 1,200 lbs. (544kg) on shelves up to and including 48" (1220mm) long; 900 lbs. (408kg) for shelves 60" (1524mm) long.
- Dunnage shelves are recommended for use on units with four posts.

Nominal Width (in.) (mm)	Nominal Length (in.) (mm)	Shelf with Grid Mat Model No.	Approx. Pkd. Wt. (lbs.) (kg)	Shelf with Solid Mat Model No.	Approx. Pkd. Wt. (lbs.) (kg)
18 457	36 914	MHP1836G	18 8.2	MHP1836F	22 10.0
18 457	48 1220	MHP1848G	22 10.0	MHP1848F	26 11.8
18 457	60 1524	MHP1860G	26 11.8	MHP1860F	30 13.6
24 610	36 914	MHP2436G	21 9.5	MHP2436F	25 11.3
24 610	48 1220	MHP2448G	27 12.2	MHP2448F	31 14.1
24 610	60 1524	MHP2460G	33 15.0	MHP2460F	37 16.8

Solid Mat Overlays

- Overlays snap onto the open grid mats to create a solid surface.
- Available for 21" (530mm) deep MetroMax Q shelves.


Fits Shelf		Model No.	Approx. Pkd. Wt.	
(in.)	(mm)		(lbs.)	(kg)
21x24	530x610	Q2124SM	0.35	0.16
21x30	530x760	Q2130SM	0.45	0.20
21x36	530x914	Q2136SM	0.50	0.23
21x42	530x1060	Q2142SM	0.60	0.27
21x48	530x1220	Q2148SM	0.70	0.32
21x54	530x1372	Q2154SM	0.80	0.36
21x60	530x1524	Q2160SM	0.90	0.41
21x72	530x1829	Q2172SM	1.00	0.45

METROMAX Q™ POLYMER AND STEEL SHELVING



Standard Interchangeable Posts

- MetroMax Q: Epoxy coated steel with Microban antimicrobial product protection.
- MetroMax i: Polymer with Microban antimicrobial product protection.
- Stationary posts include an adjustable leveling foot to compensate for uneven floors. Leveling foot can be adjusted 1" (25mm).
- When mounting a shelving unit to a dolly base, stationary posts are used.
- Special height cut posts are available. Consult your Metro representative.

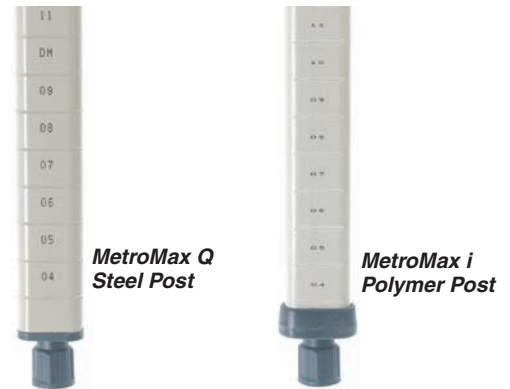

Nominal Height (in.) (mm)	Actual Height* (in.) (mm)	MetroMax Q Steel Model No.	STATIONARY POST WITH LEVELING FOOT				
			Approx. Pkd. Wt. (lbs.) (kg)		MetroMax i Polymer Model No.	Approx. Pkd. Wt. (lbs.) (kg)	
13 370	14 ³ / ₄ 375	MQ13PE	1.0	0.5	MX13P	0.5	0.2
27 685	28 ³ / ₄ 730	MQ27PE	2.0	0.9	MX27P	0.9	0.4
33 875	34 ³ / ₄ 883	MQ33PE	2.5	1.1	MX33P	1.0	0.5
54 1370	54 ³ / ₄ 1391	MQ54PE	4.0	1.8	MX54P	1.6	0.7
63 1585	62 ³ / ₄ 1594	MQ63PE	4.5	2.0	MX63P	1.8	0.8
74 1690	74 ³ / ₄ 1899	MQ74PE	5.5	2.5	MX74P	2.2	1.0
86 2195	86 ³ / ₄ 2203	MQ86PE	6.5	2.9	MX86P	2.5	1.1

Nominal Height (in.) (mm)	Actual Height* (in.) (mm)	MetroMax Q Steel Model No.	POST FOR STEM CASTER				
			Approx. Pkd. Wt. (lbs.) (kg)		MetroMax i Polymer Model No.	Approx. Pkd. Wt. (lbs.) (kg)	
13 370	13 ³ / ₄ 349	MQ13UPE	1.0	0.5	MX13UP	0.5	0.2
27 685	27 ³ / ₄ 705	MQ27UPE	2.0	0.9	MX27UP	0.9	0.4
33 875	33 ³ / ₄ 857	MQ33UPE	2.5	1.1	MX33UP	1.0	0.5
54 1370	53 ³ / ₄ 1365	MQ54UPE	4.0	1.8	MX54UP	1.6	0.7
63 1585	61 ³ / ₄ 1568	MQ63UPE	4.5	2.0	MX63UP	1.8	0.8
70 1778	69 ³ / ₄ 1765	MQ70UPE	5.0	2.3			
74 1690	73 ³ / ₄ 1873	MQ74UPE	5.5	2.5	MX74UP	2.3	1.0
86 2195	85 ³ / ₄ 2178	MQ86UPE	6.5	2.9	MX86UP	2.5	1.4

Replacement Leveling Foot:
Model No. RPM3-FOOT

Replacement Post Cap for Steel Post:
Model No. RPMQS-POSTCAP

Replacement Post Cap for Polymer Post:
Model No. RPMXS-POSTCAP

Replacement MetroMax Q Wedges
Model No. MQ9985 Bag of 4



NOTE: Compatibility with existing Metro polymer mat shelving systems

- MQ9985 wedges are compatible with original MetroMax Q shelves and posts.
- The post centers on MetroMax Q have been changed to allow interchangeability with MetroMax i™ shelves. MetroMax Q shelves manufactured within or after April 2009 are not compatible with Q shelves made prior to April 2009.
- MetroMax Q is not compatible with original MetroMax manufactured prior to April 2009.
- Posts listed in above table (ex. MQ74PE, MX74PE) can be used with original MetroMax Q shelves made prior to April 2009.

Post Clamp

Adds stability by joining posts of two separate units together. With it, each unit is supported by four posts and buttressed by the adjacent unit.

Model No. 9994X



Foot Plate

Use to add stability to the shelving unit or to bolt units to the floor.

Model No. Zinc 9993Z

Model No. Stainless Steel 9993S



Stem Casters

A variety of stem casters are offered for MetroMax i™ mobile applications.

Stem caster models include bumpers.

See Catalog Sheet 11.20 for stem casters.

Load Rating: 3 x Stem Caster Load Rating, maximum — 900 lbs. (363kg) per stem caster cart.





METROMAX Q™ POLYMER AND STEEL SHELVING

Starter and Add-On Units

- 4- and 5-tier models available. Consult the Metro catalog for models.
- Starter units: consist of shelves and (4) posts
- Add-on units: consist of shelves, (2) posts, and “S” Hooks (M9995)

“S” Hook: Used to “add on” one or multiple MetroMax Q™ storage systems while eliminating the cost of two posts per unit. Can be used to join units end-to-end, back-to-back, at right angles, etc. Two “S” hooks are required for each shelf.

Cat. No. M9995



MetroMax Q™ Intermediate

“S” Hook: Use when configuring MetroMax Q Starter and Add-On Units at right angles.


Model No. Q9995Z



	Regular “S” Hook location
	Intermediate bracket location
	Post
	Post not required


END-TO-END

“S” Hooks
M9995 — qty. 2

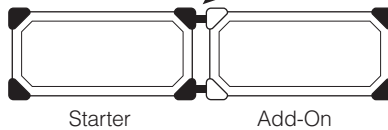


RIGHT ANGLES

Intermediate “S” Hook Kit
Q9995Z — qty. 1; M9995 — qty. 1

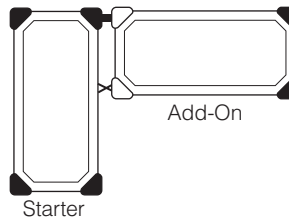

COMBINATION

Intermediate “S” Hook Kits
Q9995Z — qty. 2; M9995 — qty. 2

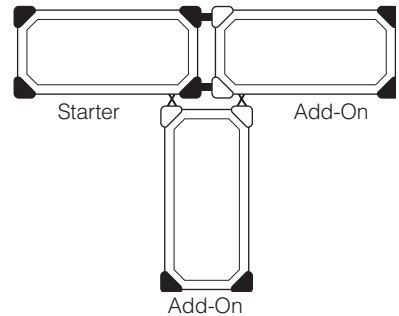

MetroMax Q™ Carts

- 4- and 5-tier models
- Grid shelf models
- Units consist of shelves, (4) posts, (2) swivel, and (2) swivel brake casters.
- Consult the Metro catalog for models.



All Metro Catalog Sheets are available on our Web Site: www.metro.com



InterMetro Industries Corporation

North Washington Street, Wilkes-Barre, PA 18705
Phone: 570-825-2741
Fax: 570-825-2852

For Product Information:
U.S. and Canada: 1.800.433.2232

Latin America: 1.561.333.3824
Europe: +31.76.587.7550

Asia/Pacific: +65.6567.8003
Middle East/Africa: +971.4.811.8286

L02-178
Printed in U.S.A. 4/09

Information and specifications are subject to change without notice. Please confirm at time of order.

Copyright © 2009 InterMetro Industries Corp.

