


ISO 4-8


Recommended Gowning Procedure

(Class 10-100,000)


PRE-GOWNING ROOM ENTRY

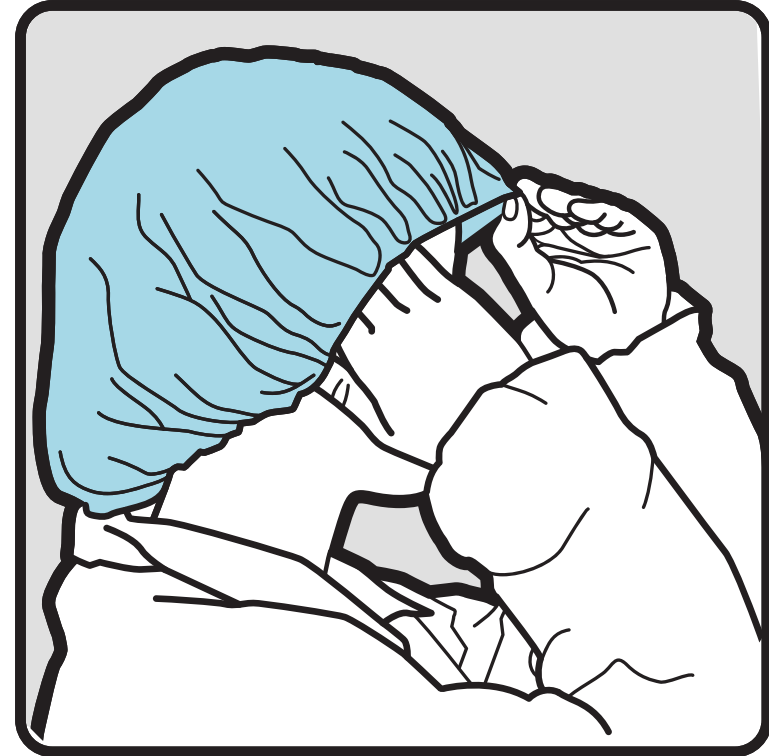


1. Hair cover: (ISO 4-8)
Place cover over head. Tuck in all hair completely. Verify both ears are fully covered by the cap.

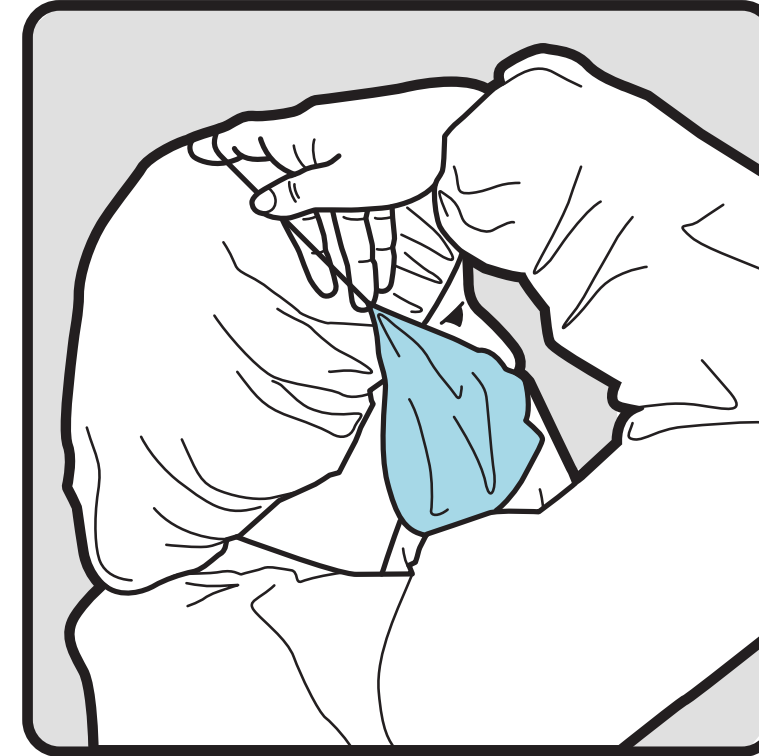

2. Beard cover: (ISO 4-8)
Secure both ear loops behind ears and ensure all facial hair and mouth are completely covered.

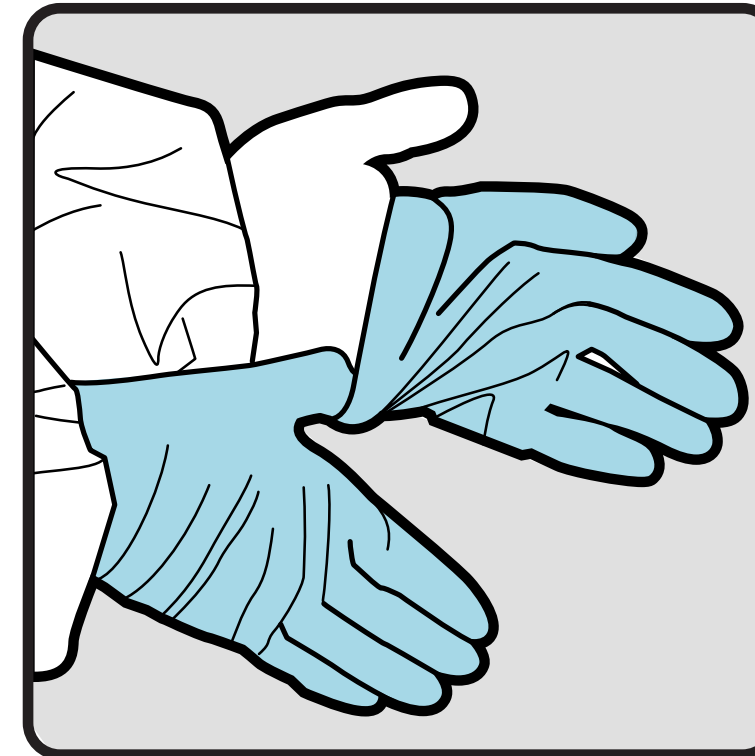

3. Gloves: (ISO 4-8)
Avoiding any outer surfaces, pull gloves onto hands and create a sealed barrier by cuffing over sleeves.

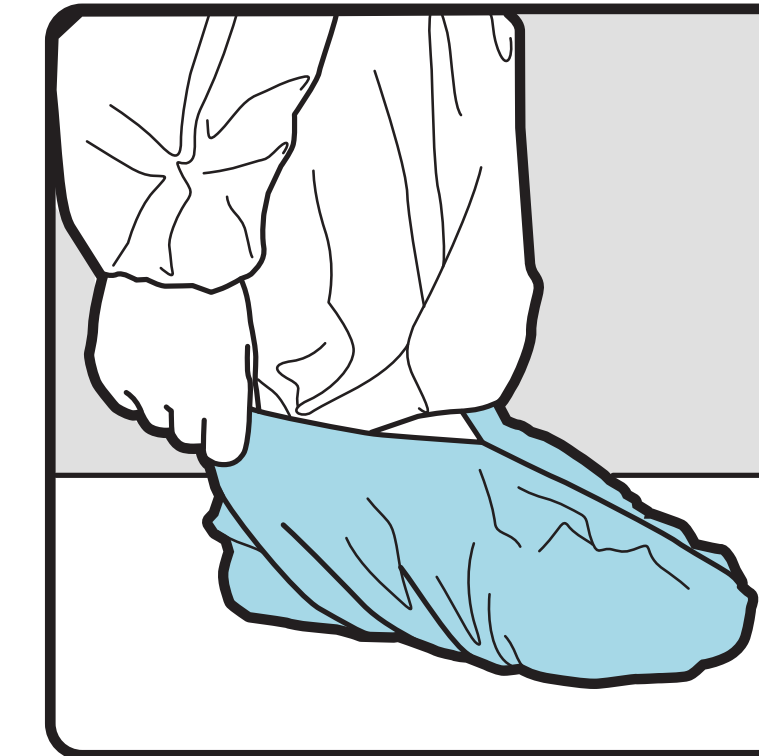

4. Shoe covers: (ISO 4-8)
Slide a shoe cover over each shoe, pulling them both up to fully enclose the footwear.

GOWNING ROOM ENTRY



5. Gowning Entry: (ISO 4-8)
Place feet on the gowning area sticky mat, taking 3-4 deliberate steps to remove particulates from shoe covers.


GOWNING BENCH



6. Garments: (ISO 4-8)
Carefully dress while keeping the garment elevated and free from contact with the floor or any surrounding furniture.




7. Boot Covers: (ISO 4-6)
Slide boot cover over first foot and swing leg to the clean side of the bench. Repeat with second foot.

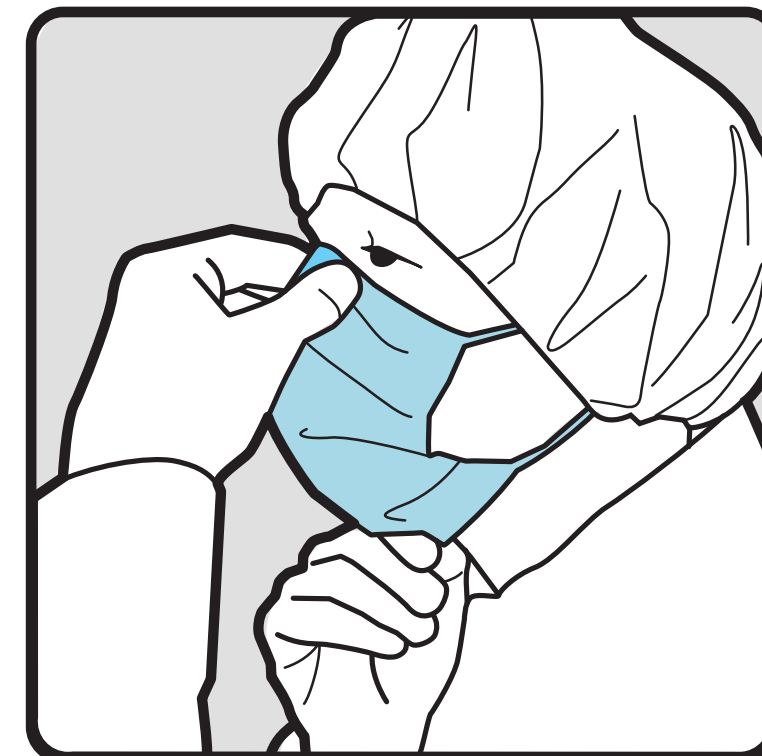

8. Face Cover: (ISO 4-6)
Secure mask using ear loops or tie strings behind head. Mold nosepiece for a snug fit and extend mask over mouth and chin.



9. Hood: (ISO 4-6)
Pull hood over head, tuck the edges under garment, and fasten all snaps securely.

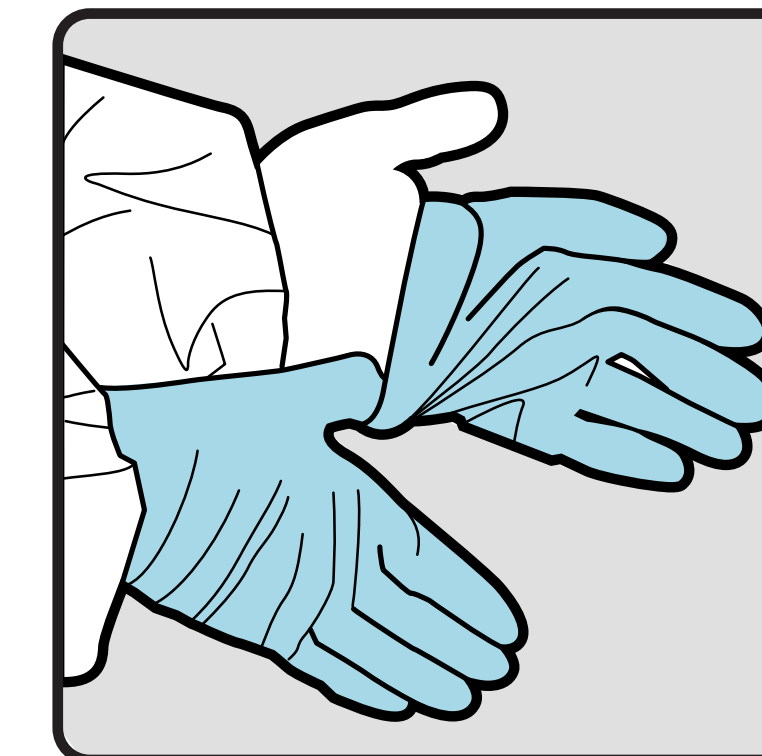

10. Gloves: (ISO 4-8)
Avoiding any outer surfaces, pull gloves onto hands and create a sealed barrier by cuffing over sleeves.

CLEAN SIDE

CLEANROOM ENTRY



11. Cleanroom Entry: (ISO 4-8)
Place feet on the cleanroom sticky mat, taking 3-4 deliberate steps to remove particulates from shoe covers.



ISO 4-8

Gowning Protocol Comparison Chart

(Class 10-100,000)

Requirement	Coverall Type	Hood	Gloves	Boot Covers	Face covering	Gowning stages	Air shower	Step-over bench	Garment use
ISO 4/5	Full-body, integrated	Integrated Width coverall	Double	Integrated/ sealed	Mask + goggles	Multiple with airlocks	Required	Required	Single-use
ISO 6	Full coverall	Separate hood	Single or double	Separate	Mask	Single dedicated room	Optional	Typically required	Reusable with laundering
ISO 7/8	Lab coat/frock acceptable	Bouffant only	Single	Basic shoe covers	Mask optional (ISO 8)	Basic gowning area	Not required	Optional	Reusable

